


How to lock your lid

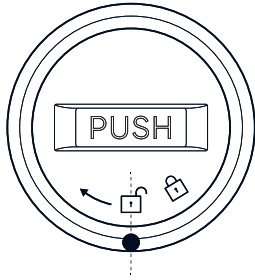

To lock your lid, first make sure the grey internal disc is in the closed (up) position.

Then, using the PUSH tab to grip, simply twist the grey disc so that the padlock symbol lines up with the marker. Then just twist back to unlock!

Going on and on and on and on...

Three things you need to know about what's in your hand.

One. It's high-quality and packed full of innovative features.

Two. It's made out of waste: post-consumer premium 304 Grade recycled stainless steel.

Three. It'll last at least ten years, and after that it's recyclable.

Let's recap: new stuff out of rubbish and then when new stuff becomes old stuff it becomes new stuff again.

Long story long, this bottle's as blameless as it is beautiful. Read on to find out more about it, if you're that way inclined.

Important Notes!



- Circular Bottle is in its **open position** when the **grey PUSH button** is down and is sealed shut when the button is up.
- To open and close the lid **for a quick sip** of your drink, simply push down on the grey internal disc to click it open, and then another push to click it closed again.
- **Ensure the lid is closed and the grey PUSH button is twisted to the locked position before putting it in your bag.** Force applied to the button when unlocked may cause accidental opening and spillages.
- Hot liquid over 65°C can cause steam pressure to build up inside a sealed bottle. **If the push button becomes stiff to operate due to pressure build-up, loosen the lid first** to relieve the pressure.
- **Do not microwave.**

Get in touch, search for Circular Design or visit our website for more info and support

@circularandco

#ChooseCircular

#CircularDesign



circularandco.com

Product Care and Information

circular & co.

REUSABLE BOTTLE

Cleaning your bottle



The Circular Recycled Stainless Steel Water Bottle is suitable for both handwashing and the dishwasher. For optimum performance we recommend washing after each use.

To clean your bottle by hand, separate the lid from the base. Then simply rinse both with hot soapy water. Put the lid in the open position to ensure a thorough clean.

The bottle base and lid are dishwasher safe. Place the lid and bottle base on the top shelf of the dishwasher separately, with the lid in the open position.

Extend the life of your bottle

We all want our products to last as long as possible. We will support you and your family to make that happen by first providing a two-year guarantee and then replacement parts to further the life of your bottle. For any problems with your Circular Bottle always visit our website for links and videos on how to repair, replace or extend its use:

circularandco.com/faq

The Two Year Guarantee

We guarantee against manufacturing defects for two years from the date you purchased your Circular Bottle. We will replace any product showing a manufacturing defect with the same or equivalent product if evidence of the defect and proof of purchase is supplied.

The Takeback Promise

In a Circular Economy, valuable materials are captured, recycled and reused, time and time again. To ensure this cycle takes place, we created our Takeback Promise. You can return your old Circular Bottle to us, we'll recycle it and turn it back into a brand new, high-value Circular product.

To say thank you, on receipt of your bottle, we will send you a 40% discount code for a brand new circular product of your choice. Just head to the website, fill in your return form and post your Circular Bottle to our collection centre:

circularandco.com/takeback



DESIGNED FOR CIRCULARITY™